AKAI

X360

MODEL

SERVICE MANUAL

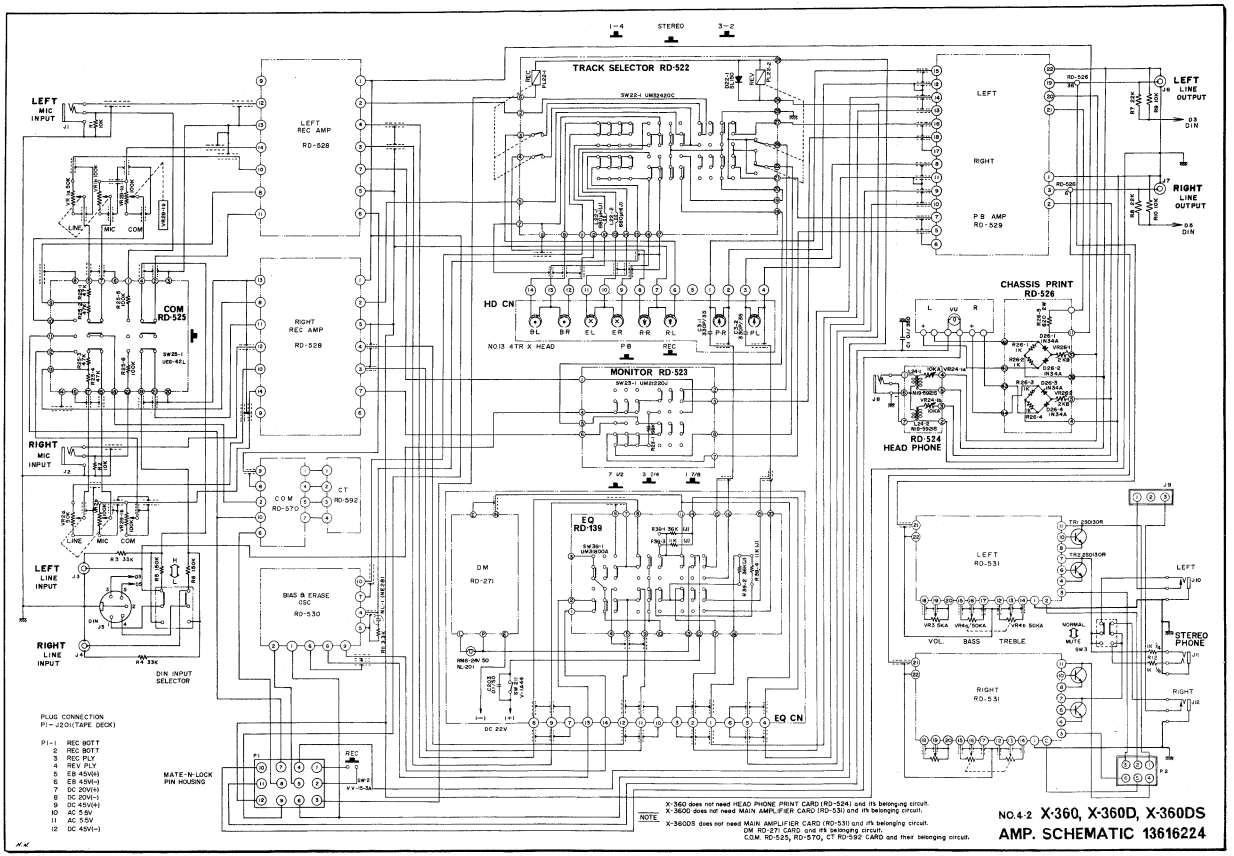
TRACK SELECTOR RD-522
LEFT MIC INPUT
RIGHT MIC INPUT
LEFT LINE INPUT
RIGHT LINE INPUT
DIN INPUT SELECTOR
COM RD-525
LEFT REC AMP RD-528
RIGHT REC AMP RD-528
COM RD-570
CT RD-592
BIAS & ERASE OSC RD-530
DM RD-271
EQ RD-139
MONITOR RD-523
HD CN
NO.13 4TR X HEAD
EQ CN
CHASSIS PRINT RD-526
RD-524 HEAD PHONE
LEFT RD-531
RIGHT RD-531
P.B AMP RD-529
LEFT LINE OUTPUT
RIGHT LINE OUTPUT
STEREO PHONE
PLUG CONNECTION P1 – J201(TAPE DECK)
MATE-N-LOCK PIN HOUSING
NOTE
X-360 does not need HEAD PHONE PRINT CARD (RD-524) and it's belonging circuit.
X-360D does not need MAIN AMPLIFIER CARD (RD-531) and it's belonging circuit.
X-360DS does not need MAIN AMPLIFIER CARD (RD-531) and it's belonging circuit.
DM RD-271 CARD and it's belonging circuit.
COM RD-525, RD-570, CT RD-592 CARD and their belonging circuit.
NO.4-2 X-360, X-360D, X-360DS
AMP. SCHEMATIC 13616224

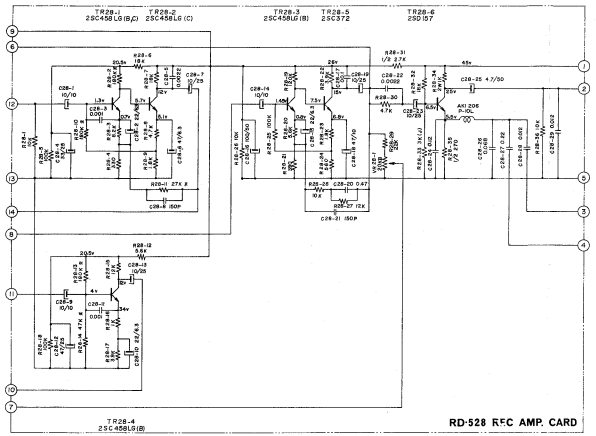

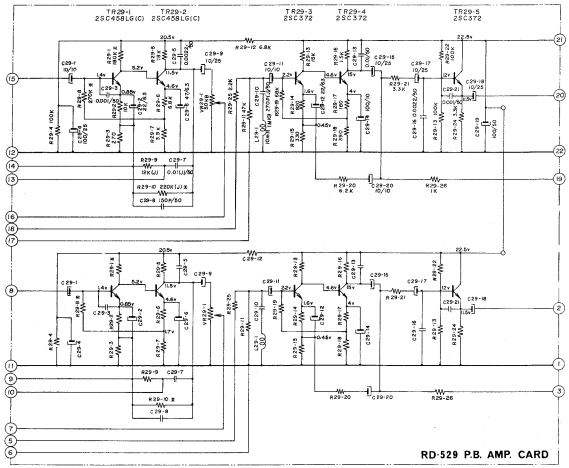

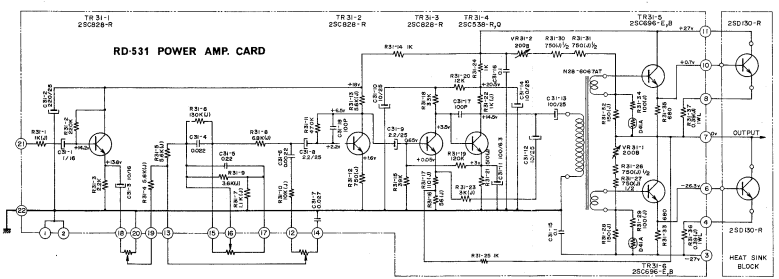

NOTE

RESISTOR
X -----NOISE LESS

RD-531 POWER AMP. CARD is not needed in X-360D and X-360DS.

NO. 4-3 **X-360, X-360D, X-360DS**
AMP. CARD SCHEMATIC 13616164

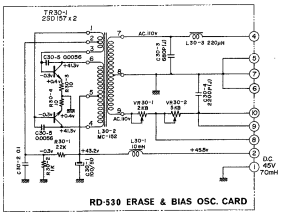

RD-530 ERASE & BIAS OSC. CARD

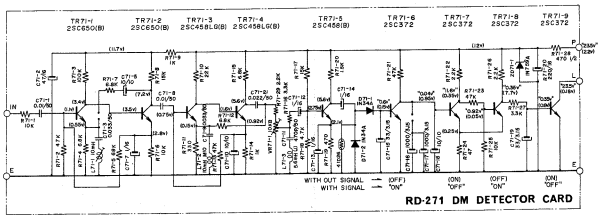

RD-271 DM DETECTOR CARD

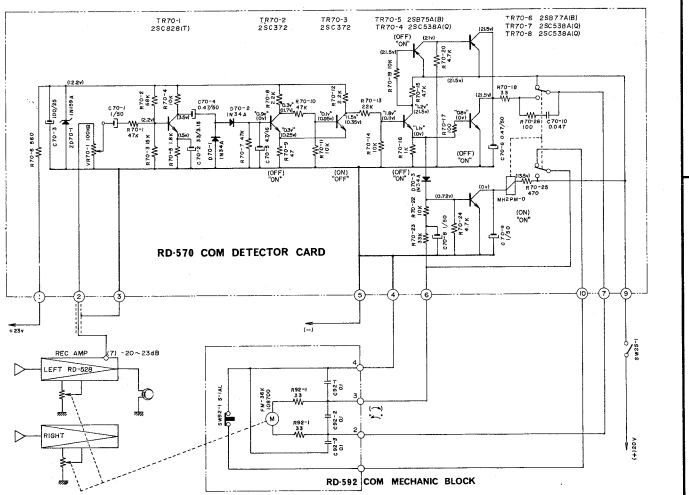

RD-570 COM DETECTOR CARD

RD-592 COM MECHANIC BLOCK

NOTE { } SHOWING NON-INPUT SIGNAL CONDITION
" " SHOWING AUTOMATIC Ovu SET
WHILE MOTOR ROTATES (WHEN MORE THAN Ovu SIGNAL INPUT)

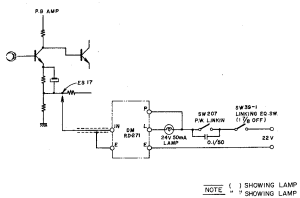

NOTE ( ) SHOWING LAMP IS "ON"
" " SHOWING LAMP IS "OFF"

NOTE

RD-570 COM. DETECTOR CARD and RD-592 COM. MECHANIC BLOCK is not needed in X-360DS.
RD-271 DM DETECTOR CARD is not needed in X-360DS.

H.W.

NO.4-4 X-360, X-360D, X-360DS
AMP. CARD SCHEMATIC 13616124

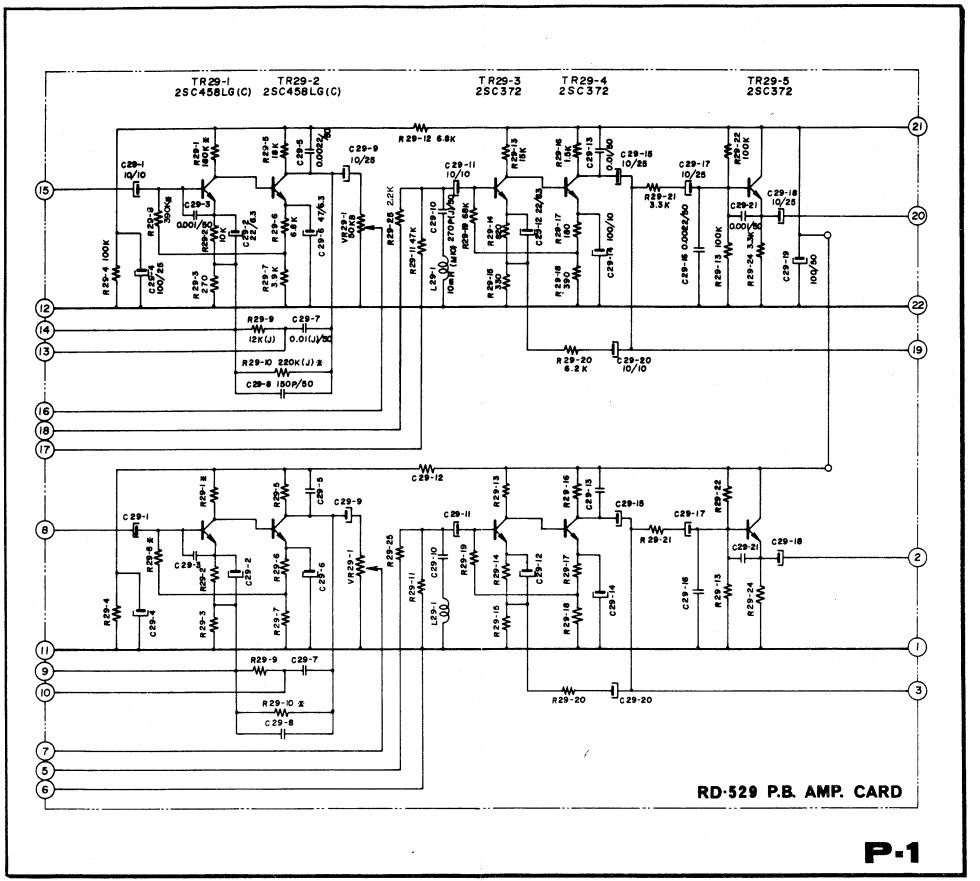
TR29-1
2SC458LG(C)
TR29-2
2SC458LG(C)
TR29-3
2SC372
TR29-4
2SC372
TR29-5
2SC372
RD-529 P.B. AMP. CARD
P-1